








871

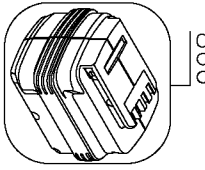

866

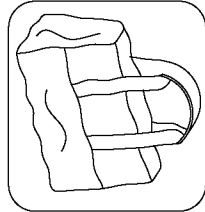

862

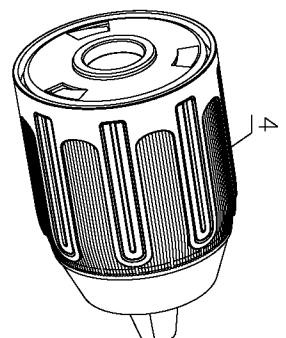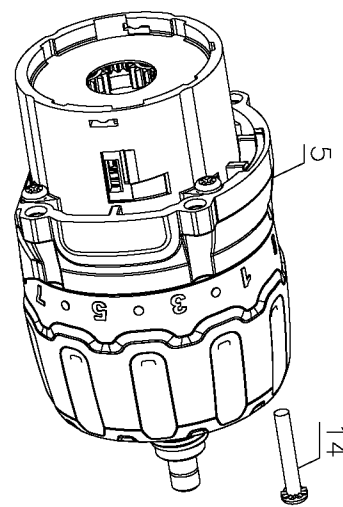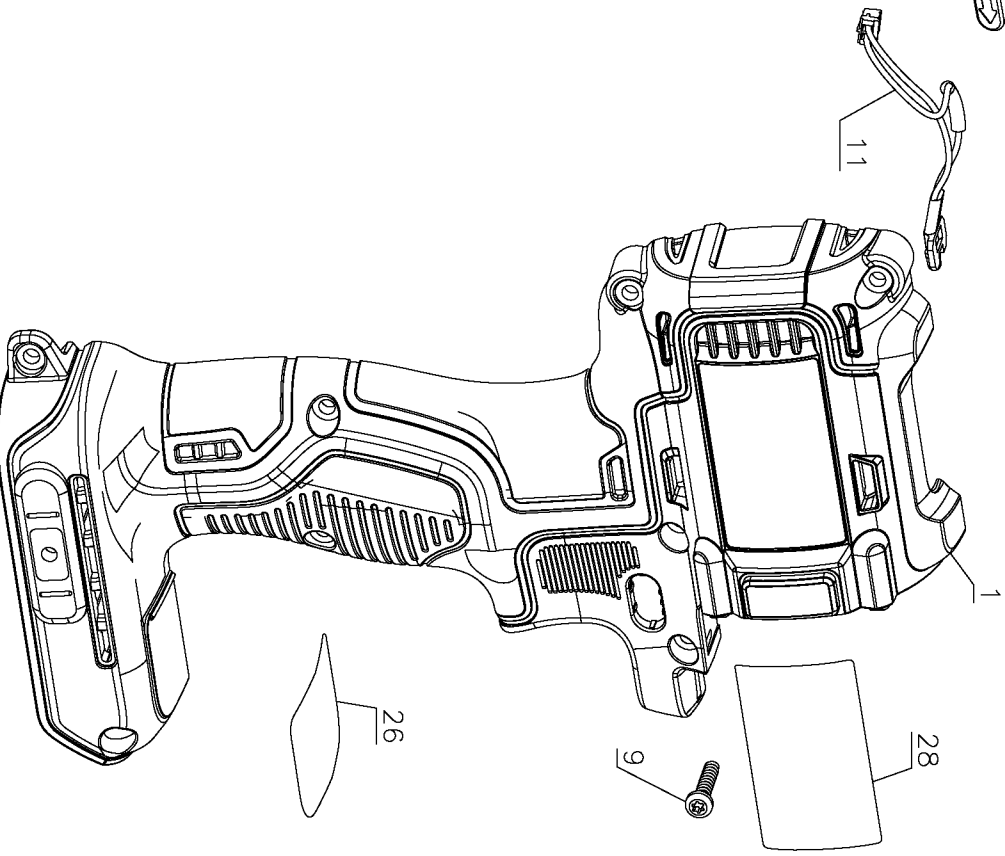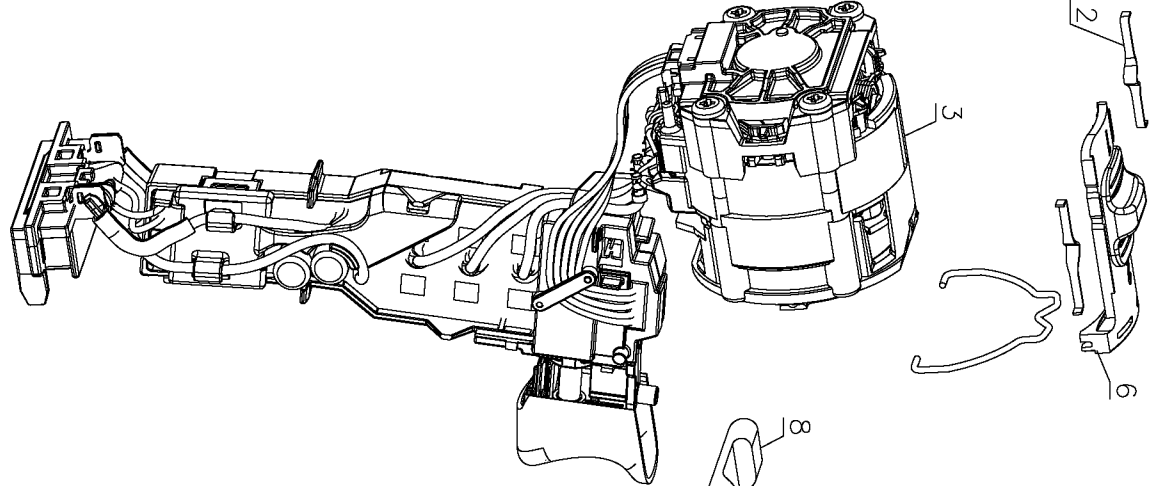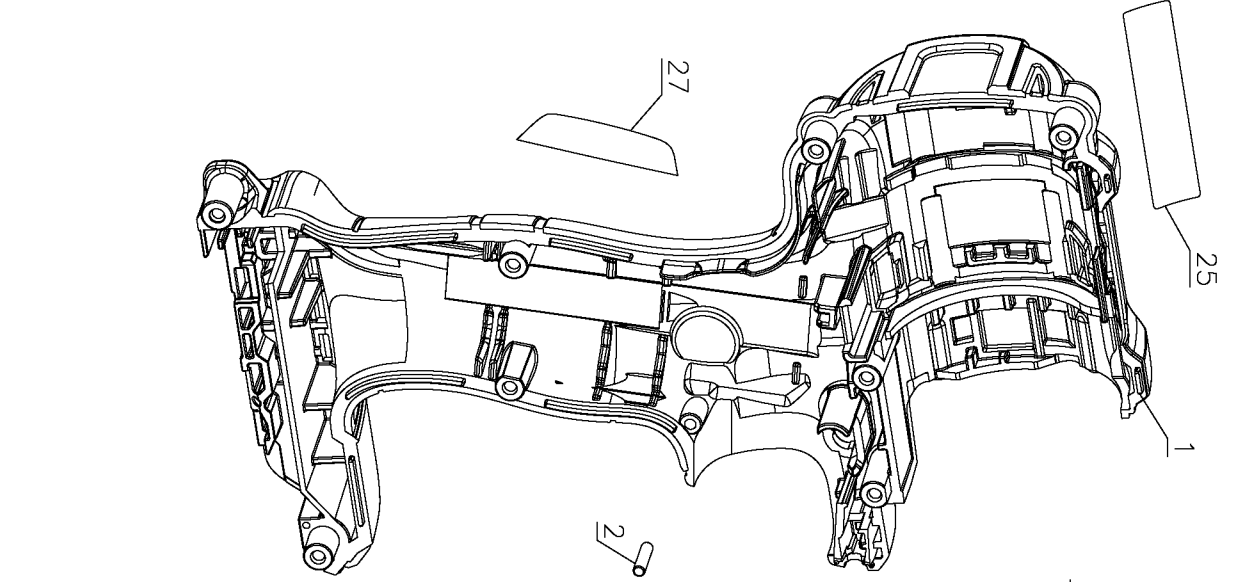

25

27

2

3

12

6

8

11

14

4

26

28

9

## Parts List for DCD777C2 Type 1

Item Number	Part Number	Description	Qty Required
1	N459083	HOUSING	1
2	N071836	ROLL PIN	1
3	N472974	MOTOR & SWITCH ASSY.	1
4	N472497	CHUCK	1
5	N472976	TRANSMISSION ASSY.	1
6	N459102	SPEED SELECT	1
8	N399342	FWD/REV BUTTON	1
9	330019-00	SCREW,PLASTITE	8
11	N459095	LED ASSY	1
12	N014681	DETENT SPRING	2
14	330019-24	SCREW PLASTITE	4
25	N463910	ID LABEL	1
26	N238179	WARNING LABEL	1
27	N298039	LABEL	1
28	N463908	RATING LABEL	1
862	N261499	SOFT BAG	1
866	DCB201	BATTERY PACK	2
871	DCB115	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.